



Cordless Jig Saw

Item No.: 4321200

Ident No.: 11013

Bar Code: 4006825601398

The TE-JS 18 Li - Solo cordless jigsaw is a powerful tool for diverse sawing jobs. The selectable pendulum action and very smooth operation enable fast and precise cuts. The universal blade holder without tools saves valuable time, while the integrated plastic sliding element protects sensitive workpieces. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.

Features

- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- LED light to illuminate the cutting area
- Integrated plastic sliding element for sensitive workpieces
- Additional attachable cutting line guide for exact cutting
- Complete with chip guard for cuts without splintering
- Supplied without battery and charger (available separately)

Technical Data

- Number of strokes 2400 min^-1 - Stroke height 25.4 mm - Cutting depth in wood 80 mm - Cutting depth in plastic 12 mm - Cutting depth in steel 10 mm - Max. bevel cuts 47° - Toolless saw blade change yes

Logistic Data

- Product weight 1.82 kg - Gross weight single packaging 2.33 kg 5 Pieces - Pieces per export carton 15 kg - Gross weight export carton

- Dimensions single packaging 238 x 90 x 227 mm - Container quantity (20"/40"/40"HC) 5080 | 11165 | 0





















Available as special accessories



Power-X-Change 18V 5,2Ah Battery Item No.: 4511357 Bar Code: 4006825598865 Einhell Grey



Power-X-Change 18V Starter-Kit Power Tools Accessory Item No.: 4512021 Bar Code: 4006825601350





Einhell Grey







Power-X-Charger 18V 30min Power Tools Accessory Item No.: 4512011 Bar Code: 4006825587029 Einhell Grey

Power-X-Change 18V 1,5Ah Battery Item No.: 4511340 Bar Code: 4006825590586 Einhell Grey